

## Accessories for S7-Panel-PLCs

There are available pin marked removable connectors either with lift arms or with bolt flanges to connect INSEVIS-devices. This allows a explicit positioning of each pin to the signals and makes the wiring easier. The wire-contact is done by maintenance free cage-clamps for max. 1,5mm<sup>2</sup> cross sections without wire end sleeves.

A mounting set with grounding terminal is part of every delivery. If periphery modules are ordered, they will be mounted for free at the INSEVIS production together with the referring rear foil, standard inserting and signal stripes.

Figure of accessories	accessories	Article-no.	MOQ (pcs)
<p><b>Connectors</b></p>  <p>E-CON16      E-CONS16 (pin marked connectors for max. 1,5mm<sup>2</sup> cross sections)</p>	<p><b>For CPU V:</b> Connector 2x8pin, lift arms Connector 2x8pin, bolt flanges Adapter for Profibus SUB-D 9</p>	<p>E-CON16-00 E-CONS16-00 E-AD-DP12-00</p>	<p>1 1 1</p>
 <p>E-CON10      E-CONS10 (pin marked connectors for max. 1,5mm<sup>2</sup> cross sections)</p>	<p><b>For CPU T:</b> Connector 2x5pin, lift arms Connector 2x5pin, bolt flanges</p>	<p>E-CON10-00 E-CONS10-00</p>	<p>1 1</p>
 <p>(pin marked connector for max. 1,5mm<sup>2</sup> cross sections)</p>	<p><b>Only for PC351V/P (periphery):</b> Connector 2x4pin</p>	<p>E-CON09</p>	<p>1</p>
<p><b>External memory</b></p>  <p><b>Hint:</b> S7-program runs without these cards, these parts are used for archiving / recipes / updating only</p>	<p>Micro SD-card 1GB (ext. memory) Micro SD-card 2GB (ext. memory) Micro SD-card 4GB (ext. memory) Micro SD-card 8GB (ext. memory)</p>	<p>E-MSD1-00 E-MSD2-00 E-MSD4-00 E-MSD8-00</p>	<p>1 1 1 1</p>
<p><b>Customized labeling</b></p> <p><b>Hint:</b> <sup>1)</sup> Single fix costs only, no run-time costs per single PLC</p>	<p>3D-doming labels with logo (front) OEM-firmware with customer logo Inserting stripes H with logo (rear) Inserting stripes V with logo (rear)</p>	<p>E-LAB3D-00 SW-BS-OEM <sup>1)</sup> E-LABH-00 E-LABV-00</p>	<p>100 1 100 100</p>
<p><b>Software</b></p> <p><b>Hint:</b> <sup>2)</sup> Company license, no run-time costs per single PC <sup>3)</sup> Maintenance license due yearly, if new versions are required, otherwise only old versions do run</p> <p>Software available for free download at INSEVIS web sites</p>	<p>VisuStage ConfigStage RemoteStage ServiceStage VisuStage full version company license VisuStage full version maintenance license</p>	<p>- - - - SW-VS-2.0 <sup>2)</sup> SW-VSW-2.0 <sup>2)3)</sup></p>	<p>free download free download free download free download 1 1</p>
<p><b>Spare parts</b></p> <p><b>Hint:</b> A mounting set with grounding terminal is part of every delivery</p>	<p>Additional mounting set with grounding terminal for 3,5" and 4,3"-devices Additional mounting set with grounding terminal for 5,7" and 7"-devices Additional mounting set with grounding terminal for 10,1" and 10,2"-devices Additional mounting set with grounding terminal for 15,6"-devices</p>	<p>E-MNT35-00 E-MNT57-00 E-MNT100-00 E-MNT156-00</p>	<p>10 10 10 10</p>

Stainless steel front plates, attached parts and customized designs on request.